 


CSS-6400

AM/FM/DVD, 4-CHANNEL, Public Address Capability

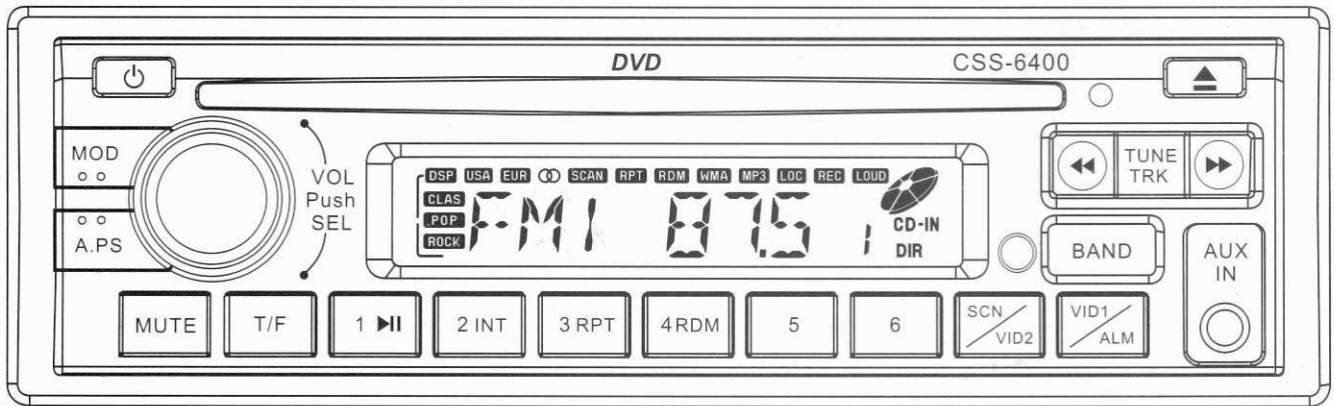

Owner's Manual

Custom Radio Corporation

Contents	1
General Features	2
Description of Audio Unit Features	3~5
Operation Method	6~8
Function of the SEL Button	9~10
Public Address (PA), Setting the Clock & Alarm Programming	10
Tips for Handling the Discs & Disc Error Messages	11
Car Audio Wiring Configuration	12
Radio Reception	13~16
Specifications & Performance	17
Remote Control	18 ~20

Please take a few moments to read this manual carefully to ensure you understand the operation of the unit before you start using it.

General Features

This FM/AM/DVD car audio unit is equipped with the following features.

1. Radio unit (Tuner)

- Electronic station search
- Memory function which you can store 18 FM Stations and 12 AM stations in Memory.
- A.PS (Auto Store) system selects and memorises the stations automatically in order of good reception.

2. DIGITAL VERSATILE DISC PLAYER UNIT

- 5-1/4 (12cm) Discs available
- Power Loading System
 - ① When disc is inserted, it starts playing automatically.
 - ② Even if the power is off, the unit is powered on automatically when the disc is inserted, and it will start playing automatically.
- Repeat Function
 - ① You can listen to the same track repeatedly.
 - ② The disc is re-played automatically after listening to all the tracks on the disc.
- DVD/VCD/CD/MP3 Intro Button
 - Press the INT button to automatically play the first 10 seconds of each track which is recorded on the disc.

3. AUX IN

- The radio is equipped with a Auxiliary Audio input jack, that allows the user to listen to external sources, such as MP3 player.

4. Public Address (PA)

- Two four-pin connectors on the rear of panel accept microphone inputs.

5. Others

- Electronic volume control function. ("SEL" Button - DSP, Bass, Treble, Balance, Fader, VOL)
- High-Power external Amp design (35Wx4 channels)

Description of Audio Unit Features

◆ RADIO SYSTEM

(POWER) Button

- Press this button to turn the audio unit ON.
- Press it for about 3 seconds to turn the unit off.

BAND Button

- During radio operation, each time this button is momentarily pressed, the radio band is changed. The indications



Will appear on the display panel according to your selection.

TUNE TRK Button (SEEK)

- **AUTO:** Momentarily pressing and releasing either TUNE TRK button will activate the Automatic Seek Tuning function, provided manual tuning mode is not in effect. The radio will seek the next acceptable signal strength station in the + or - direction and the stop and remain at the frequency.

MANUAL TUNING

 
- To manually select a desired frequency, press and hold down TUNE button until radio BEEPS and "MANU" briefly appears on display. Now use TUNE up/dn button to select desired station. To exit the manual tuning mode, hold down TUNE button for more than 2 seconds until radio BEEPS.

MUTE BUTTON

- Press this button to mutes output.
- Press again to enables output.

"SET" (SELECTOR) Button

- Electronic encoder type button which is used to select and control all functions related to the volume and sound quality of the audio unit.
- When you momentarily press this button, you can change the following functions like shown in the order below:




[Note] Once you've selected the function you wish to change, you have 5-seconds to adjust the settings before it automatically switches back to the volume control (Default).

PRESET (1 to 6) Buttons

- Tune the radio to a desired station then press and hold one of the preset buttons for 2 seconds. The desired station will now be stored in memory.

AUX IN

 - Select AUX IN by pressing MODE button twice momentarily "AUX IN" will appear on display.

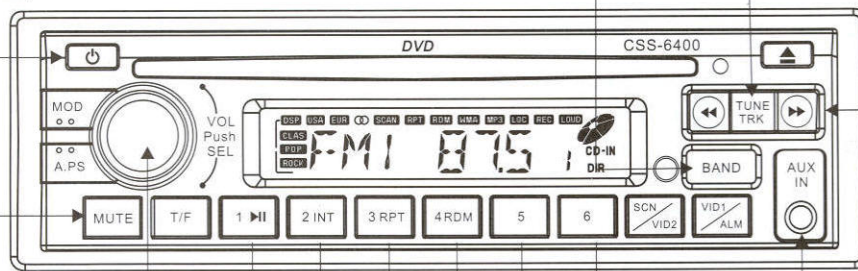

Description of Audio Unit Features

◆ RADIO SYSTEM

MODE Button

 
- Press MODE button momentarily to select between Radio, Disc Play or Aux.

LIQUID CRYSTAL DISPLAY

- The LDisc shows the radio reception information such as the FM, AM, Stereo, Ch No., Reception frequency, Volume, Bass, Treble settings etc...

VIDEO/ALM Button

- **ALM:** Press and hold this button for 2 seconds to change into Alarm mode.

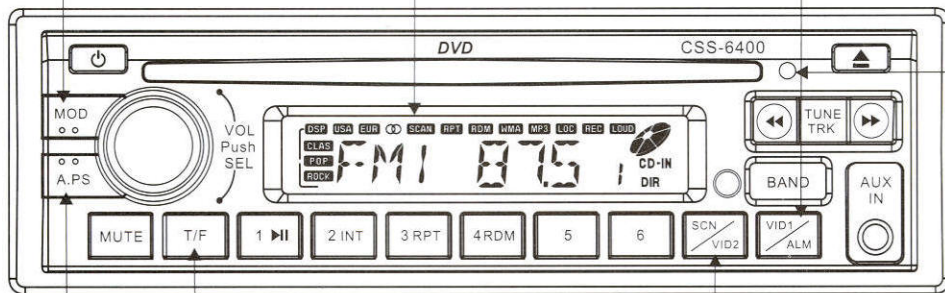

Flashing RED LED

- Once the Accessories (IGN) is turned off, this LED will begin to flash. If a Disc in the unit, this LED will indicate green light.

A.P.S Button (Auto Preset)

- **PRE-SET SCAN:** Press this button momentarily scans the stations preset 1-6 into each AM band and each FM band. The unit will stop at each preset station for approximately 5-seconds before continuing to the next preset station.
- **AUTO-STORE:** press this button for more than 2 seconds and it will automatically preset 6 stations into memory (presets 1 to 6) in order of strongest signal strength.

T/F (TIME/FREQUENCY) Button

- In any mode, press T/F to display the time on LCD for about 5 seconds and then revert to normal indication.
- **Setting or Changing the time**
Press and hold the T/F button until time (HOUR) begins to flash. Rotate volume control knob clockwise(CW) to increment hour indication, rotate volume control knob counter-clockwise(CCW) to decrement the hour indication. Now press and hold T/F button again until time (MINUTES) begins to flash. Rotate volume control knob CW to increment the minute indication, rotate volume control knob CCW to decrement the minute indication. Once time (Hour or Minute) has been adjusted, wait 5 seconds until time stops flashing, time is now set.

(SCAN) Button

- When you press this button the frequency simply automatically stop at the next broadcast for reception for 3 seconds and then continues to scan.
Note: Pressing SCAN button during scanning, radio will stop at current broadcast.

◆ DIGITAL VERSATILE DISC SYSTEM

MUTE Button

 
- Press this button to "MUTE" the audio sound.
- Press again to deactivate the "MUTE" feature.

DVD DISC SLOT

- Insert or remove Disc.

TUNE / TRK BUTTON

- Press the "▶▶" button momentarily to select Tracks on the disc in a forward direction. If you press and hold the "▶▶" button, it will quickly skip through the Track / disc in the forward direction until the button is released.
- Press the "◀◀" button momentarily to select Tracks on the disc in a reverse direction. If you press and hold the "◀◀" button, it will quickly skip through the Track / disc in the reverse direction until the button is released.

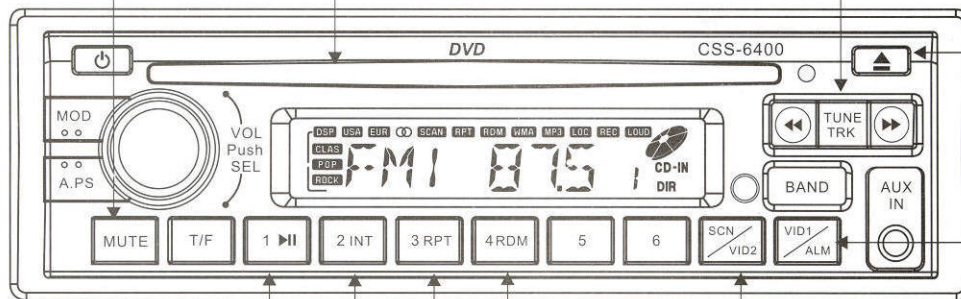

EJECT Button

- Press this button to eject the disc.

VID1/ALM Button

- Shortly press this button to select Video 1 mode.

PLAY / PAUSE Button

- Press this button to Pause the Disc.
- Press the button again to play the Disc.

INT Button (INTRO SCAN)

- Press this button to hear the first 10 seconds of each track recorded on the Disc. If you find a song you like, simply press the button again to cancel the intro scan feature and to continue playing the whole track.

RPT (REPEAT) Button

- While playing a desired track, press the RPT button to play the track repeatedly.
- Press RPT again to cancel the Repeat feature.

RDM (RANDOM) Button

- While a Disc playing, press the RDM button to play all tracks in a random sequence.
- Press RDM again to cancel the feature.

SCN/VID2 Button

- Press this button for more than 2 seconds to select Video 2 mode.

Operation Method

RADIO SYSTEM

1. Listening to the radio

 
a. PWR button



Press the PWR button to turn the unit on; press it again to turn off the unit.

Note: Whenever the unit is powered for the first time, it will default to (tuner mode). After initial power, it will memorize all setting from previous play mode. When Ignition is turned off while radio is operating normally, the unit will automatically power on when Ignition is turned on again and have memorized all settings from previous play mode.

b. MODE button



Press the MODE button to select mode between Radio and Aux In.



 
Use the BAND button to select your desired band. (FM or AM)

d. How to select / tune a radio station (seek)


- Manual tuning



- Listening to FM (moves in 200KHz steps)

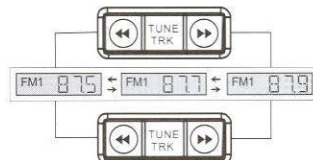

 - Listening to AM (moves in 10KHz steps)

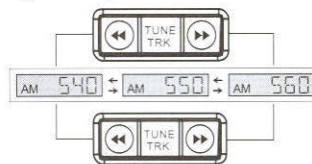

2. Tuning and selecting radio stations



- Auto station tuning (SEEK) AM and FM

When you press the SEEK buttons momentarily (one touch), the frequency will automatically change to the next strong signal station.

- MANUAL station tuning (SEEK) AM and FM

 
To manually tune a desired radio station, press and hold either "◀" or "▶" buttons until radio BEEPS and icon "MANU" appears on LCD briefly and then release. Now press the "◀" or "▶" button momentarily to move the frequency "UP" or "DOWN" in steps. To return to Auto Seek tuning mode, press and hold "◀" or "▶" buttons until unit beeps. The radio is now in Auto Seek tuning mode.

- PRESET station tuning

To Select a station which is stored in memory, simply momentarily press anyone of the PRESET Buttons 1 to 6. The Station stored in the PRESET button, will automatically be selected.
(The LDisc show the CH number and frequency.)

3. Presets

- To store your favorite radio stations into memory, please follow the steps below.
- a. Select a radio station by using the tune buttons.
- b. Once selected, simply hold one of the PRESET buttons down for more than 2 seconds until radio beeps. The station is now stored on the preset selected.



Note: 18 FM stations and 12 AM stations can be stored in memory by using the 6 preset buttons.(each band can store 6 stations.)

4. VERIFYING STATIONS HAVE BEEN STORED IN MEMORY

Once you have completed storing your desired radio stations, simply press each PRESET momentarily to check if the correct stations have been memorized.

◆ DVD/VCD/CD/ MP3 DISC SYSTEM

1. Listening to your Disc

Insert a Disc into the disc slot with the label side facing up. Once the Disc has been inserted, it will automatically start playing Track 1. If there is a Disc already in the unit, simply press the MODE button to select the Disc Function.

a. Track select (UP / DOWN)

 
Each time you press the Track UP / DOWN button, it moves in the forward or reverse direction by one track.



Press "◀" Button one time



Press "▶" Button one time



b. PLAY / PAUSE

While a Disc is playing, press this button to PAUSE the Disc.
Press again to Resume Play.

Operation method

c. INT. (Intro) 2 INT

Press this button to play the first 10 seconds of each Track recorded on the Disc.

To stop this feature, simply press the button again.

d. RPT. (Repeat) 3 RPT

Press this button to repeat the Track that is currently playing.

Press again to cancel the Repeat feature.

e. RDM. (Random) 4 RDM

Press this button to randomly play tracks on the disc

 
Press again to cancel the Random feature.

f. EJECT ▲

Press this button to EJECT your Disc.

◆ AUX IN SYSTEM

Use MODE button to select AUX IN.



- Attain an audio cable with 1/8" (3.5mm) male plug at each end. First connect the cable to the radio, then connect the other end to an external audio device.
- Now press MODE button repeatedly until "AUX" is displayed on the LCD panel.

Important: Before selecting AUX mode, verify the cable connected to both audio device & radio. Since audio devices vary in output amplitude levels. It is recommended that the external audio device not be set at max output volume. Very high output levels from audio devices may cause audio distortion to the output of the radio.

◆ VIDEO SYSTEM

This Car Audio unit can be equipped with two video system.

- VIDEO 1

Simply press VID1/ALM button to enter Video 1 mode; press again to exit the Video 1 mode.

Note: When Video 1 is playing, MODE, BAND, and SCN/VID2 buttons have no function. If you want to change to other mode, you should exit Video 1 mode first.

- VIDEO 2

Press and hold SCN/VID2 button for about 2 seconds to enter Video 2 mode. Press and hold it again to exit the Video 2 mode.

Note: When Video 2 is playing, MODE, BAND, and VID1/ALM buttons have no function. If you want to change to other mode, you should exit Video 2 mode first.

 
Press the switch on Video Trigger also can activate Video 2, now "INPUT 2" will display on LCD. Input 2 has the priority over Video1 and Video2. Press the switch again to exit INPUT2 mode, and the unit will automatically back to the previous working mode.

1. FUNCTIONS OF "SEL" BUTTON

The Selector button is used to control the following functions:

- DSP
- Bass (Press once)
- Treble (Press twice)
- Fader (Press three times)
- Balance (Press four times)
- Volume
- BEEP on, BEEP 2nd (Press and Hold)
- Volume memory limit (Press and Hold, then Press Once)

a. Controlling the Volume



◆ Once the audio units is turned on, you can adjust the volume without having to press the "SEL" button.

Right - Increases the Volume "0-30"
Left - Decreases the Volume

To increase the volume level, rotate the volume control clockwise (CW). "VOL" will appear and the volume level will be shown on the display panel from a minimum of VOL 0 to a maximum of VOL 30. To decrease the volume level, rotate the volume control counter clockwise (CCW). LCD will automatically return to the normal indication 5 seconds after the last volume adjustment.

b. Adjusting Initial Volume

 
Press and hold the "SEL" button until BEEP ON or BEEP 2ND appears on the LCD, release and press the "SEL" button again and I-VOL 10 will appear on the LCD. Now using the "SEL" knob, adjust the Initial Volume to the desired setting. Once completed, wait 5 seconds for the unit to exit this mode.

[Note] If the volume level is lower than the initial Volume setting when audio unit is turned off. Once the audio unit is switched back on again, the audio unit will remember the lower level and resume volume at that level.

c. Controlling the Bass, Treble, Balance and Fader

These adjustments are controlled by pressing the "SEL" button.

Note: If no adjustments have been made within 5 seconds, it will automatically switch back to the Volume Control Mode.



2. Bass control

Turn left to decrease the bass.
Turn right to increase the bass.

3. Treble control

Turn left to decrease the treble.
Turn right to increase the treble.

4. Fader control

Turn left to decrease the front speaker volume.
Turn right to decrease the rear speaker volume.

5. Balance control

Turn left to decrease the right speaker volume.
Turn right to decrease the left speaker volume.

d. Controlling the Beep ON, Beep 2ND

BEEP ON: Every time you press a button, you will hear a beep sound.

BEEP 2ND: You will only hear beep sound if the button is held down for more than 2 seconds.

To change this feature, simply hold the "SEL" Button down until "BEEP ON or BEEP 2ND" appears on the LCD. Within 5 seconds, turn the "SEL" knob left or right to change the setting. Now wait 5 seconds for the unit to exit this mode.

Public Address (PA), Setting the Clock & Alarm Programming

- PUBLIC ADDRESS (PA)

- The Radio is equipped with three microphone input for public address purposes.

- MICROPHONE ONE (MIC 1)

When the microphone press-to-talk switch is activated on microphone one(MIC 1), the current program audio output is interrupted, "MIC 1" appears on the display and the microphone voice input can be heard through the speakers. When the microphone switch is released, the previous program audio output is restored and "MIC 1" disappears from display. Output level heard through the speakers, is controlled with MIC 1 volume control.
Note : Mic 1 input uses CSS/CRC-103M series microphones.

- MICROPHONE TWO (MIC 2)

When the microphone press-to-talk switch is activated on microphone two(MIC 2), the current program audio output is interrupted, "MIC 2" appears on the display and the microphone voice input can be heard through the speakers. When the microphone switch is released, the previous program audio output is restored and "MIC 2" disappears from display. Output level heard through the speakers, is controlled with the Radio volume control.

Note : MIC 2 input uses CSS/CRC-105 series and gooseneck type microphone.

MIC 2 volume levels will be memorized by the unit from previous set level during normal operation and when radio is turned off.

MIC 2 has priority over the other two microphones.

- MICROPHONE THREE (MIC 3)

This microphone has the same operation with microphone two.

- SETTING THE CLOCK

1. Turn vehicle ignition on, then power up the radio.
2. Press and hold the T/F button until the time (hour) display begins to flash.
3. With the hour display flashing, rotate Volume control counterclockwise to decrement hour indication, rotate Volume control clockwise to increment the hour indication.
4. Press and hold the T/F button once again until the minutes display begins to flash. Adjust the minutes display in the same manner described for hours indication in step 3.
5. Five seconds after the last hour or minute adjustment is made, the time will be set into the unit and the time indication remains steady.

- ALARM PROGRAMMING






 
When the radio is off and the ignition switch is on, the alarm feature of the radio can be programmed as follows:

1. Press and hold the ALM button for about 2-3 seconds, ALARM ON or OFF appears on the display.
2. If the alarm is off, rotate the volume control clockwise to turn on the alarm (ALARM ON).
3. Momentarily press the ALM button again; the hours digit flashes; rotate the volume control to set the hours forward (clockwise) or backward (counter clockwise).
4. Momentarily press the ALM button again, the minutes digit flashes, rotate the volume control to set the minutes forward(CW) or backward (CCW) as desired.
5. Press the ALM button again, and ALM SET will appear on the display.

Tips for Handling the Discs & Disc Error Messages

Error Code	Reason
Err	1> Loading is not completed after over 20 secs during the loading operation (* twice trial)
	2> Unloading is not completed after over 35 secs during the unloading operation (* Four times trial)
Err	1> Disc has been inserted upside down. (remove and re-insert the correct way)
	2> Disc is dirty or defective and be can not be read. (Clean DISC and try again.) / (Try another known working Disc.)
Err	1> Pick up can't move to the most inner circle after 10 secs. (Poor Quality CD-R)


【Note】 Some Disc-R's may not play and may cause an ERROR CODE to appear. If a Disc becomes stuck inside your audio unit, press BAND and MODE buttons simultaneously for about 2 seconds (reset function) or try the EJECT button again. If a poor quality Disc-R's become stuck inside your audio unit, this will not be covered by Warranty. Contact Your dealership to have the Disc removed.

<p>1. Use only Disc's which are marked with the Compact Disc Digital Audio logo as shown.</p>	
<p>2. Take care not to cause any damage to the disc while handling. Handle the disc like shown in the diagram below. This may help prevent the disc from being damaged.</p>	
<p>3. Do not attach any labels to the top of your Discs. This may cause the Disc to get jammed in your Disc player and it's not covered by warranty.</p>	
<p>4. Keep the playing surface clean from dust and fingerprints. You can wipe them with a soft cloth before playing. (The wiping direction should be from the center to the outside of the Disc as shown).</p>	
<p>5. Place your Disc's in their protective cover when not being used.</p>	
<p>6. Min discs 3" (8cm) may sometimes eject immediately upon inserting if they are inserted unevenly. In this case insert the disc in the central part again.</p>	


Car Audio Wiring Configuration

1. Connection diagram (36P)

 Please refer below for vehicle's audio connector wiring configuration...

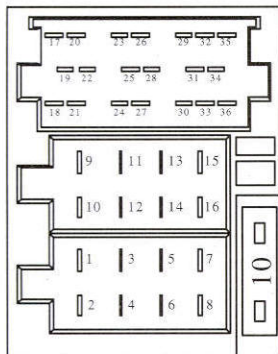

No	DESCRIPTION	No	DESCRIPTION
1		9	REAR RIGHT + (PURPLE)
2		10	REAR RIGHT - (PURPLE/BLACK)
3		11	FRONT RIGHT + (GRAY)
4	IGNITION (+12VDC) (RED)	12	FRONT RIGHT - (GRAY/BLACK)
5	AUTO ANTENNA (BLUE)	13	FRONT LEFT + (WHITE)
6		14	FRONT LEFT - (WHITE/BLACK)
7	MEMORY (YELLOW)	15	REAR LEFT + (GREEN)
8	GROUND (BLACK)	16	REAR LEFT - (GREEN/BLACK)
21		25	AUX GND
23	LAUX IN	26	RAUX IN
24	AUX SHEILD GND	27	

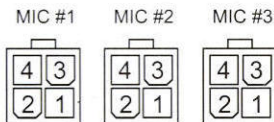 


MIC #1		MIC #2		MIC #3	
NO	DESCRIPTION	NO	DESCRIPTION	NO	DESCRIPTION
1	SIGNAL	1	SHIELD	1	SHIELD
2	GROUND	2	SIGNAL	2	SIGNAL
3	PWR (+8VDC)	3	GROUND	3	GROUND
4	SWITCH	4	SWITCH	4	SWITCH

Video Trigger



NO	DESCRIPTION
1	TRIGGER 1
2	TRIGGER 2
3	SWITCH
4	GND

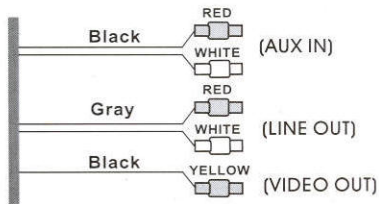 


TUNER UNIT		
FM	Reception Frequency	87.5 ~ 107.9MHz
	Effective Sensitivity (MONO) (30dB S/N)	Below 10dBu
	S/N Ratio	Above 52dB
	Stereo Separation (1KHz)	Above 30dB
AM	Reception Frequency	530 ~ 1710KHz
	Frequency Characteristics (-30dB)	30Hz ~ 10KHz
	S/N Ratio	Above 45dB

DVD DISC UNIT	
Method	Optical
Number of Channels	4 Channels (Stereo)
Dynamic Range	Above 90 dB
S/N Ratio	Above 50 dB
Distortion factor	Below 0.3% (1KHz)
Channel Separation	Above 50 dB
WOW & Flutter	Below measured limit value

AUDIO UNIT	
Maximum Output Power	35W x4CH
Frequency Characteristics (-30dB)	30Hz ~ 10KHz
Bass Control	10dB ± 3dB
Treble Control	10dB ± 3dB

POWER UNIT AND SPECIFICATIONS	
Power Supply Voltage	13.8V (10.8 ~ 15.8V) available
Speaker Impedance	4 ohms
Chassis Dimensions (WxHxD)	178 x 50 x 151.7 mm 7.00 x 1.97 x 5.97"
Panel Dimensions (WxHxD)	180 x 50 x 18.5 mm 7.09 x 1.97 x 0.73"
Commercial Fuse Spec.	250V 10A
Weight	Below 2kgs

 [Caution] Any changes modifications to this audio unit will void its Warranty.

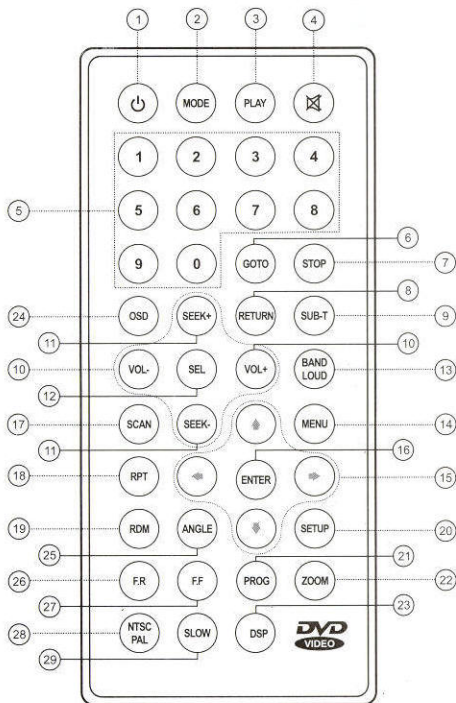

Function and Name

1. Power on / off button
Simply press it to power the unit on. Press it again to power it off.
2. MODE button
Press this button to select from RADIO, DVD, or AUX-IN mode.
(Note: In Video mode, MODE button has no function.)
3. CD / VCD / DVD play button
Press this button to resume playing the tracks on CD, VCD or DVD.
4. Mute (⏏) button
Press this button to mute the sound output. To disable mute function, press any button.
5. Number buttons
On radio mode, you can select one of the 6 stored stations on each hand by pressing any one of the digits (5) button;
On the playing mode, you can select any track directly by using digits (5) button.
For example: if you need the fifteenth track, you can first press button +10 and then press button 5, the corresponding track 15th will be played; when button +10 is first pressed, it works as 10+; when pressed at seconds time, it works 20+ ; when pressed at the third time, it works 30+, And the like.
6. GOTO button
On VCD, CD playing mode, press the GOTO (6) button to set the time when you begin to play the track, and the television will display the time --:--. Enter your desired time by pressing digits (5) buttons. For example: enter: 25:00, it will automatically start playing the track from point of the twenty-fifth minutes in the disc.
On DVD playing mode, press the GOTO (6) button once and input a desired track number, then press play (3) button to play the DVD from the position corresponding to the track number selected; press the GOTO (6) button twice and input a desired time to play the DVD from the position corresponding to the time selected.
For example: press GOTO (6) time twice and the television will display the time --:--:--. Enter your desired time by pressing number button digits (5) buttons. Then press play button, it will automatically start playing the track from point of your desired time in the disc.
7. STOP button
Press this button to stop playing.

7. STOP button
Press this button to stop playing.
8. RETURN button
While playing, press the RETURN (8) button to back to main menu.
9. Sub-T button
On DVD mode, press the SUB-T (9) button to switch the menu language.
10. VOL UP or DOWN button
Press this button (10) to increase or decrease the sound.
11. SEEK UP or DOWN button
On the radio mode, repeatedly press SEEK up or down button (11) to manually search a station upward or downward; press and hold this button (11) for more than 3 seconds, the radio will automatically search a station upward or downward until it finds a station.
On the playing mode, repeatedly press this button you can select your desired track upward or downward; press and hold this button (11) to fast-rewind or fast-forward to reach your desired track quickly.
12. SEL button
Repeatedly press this SEL (14) button to select the desired mode in the follow order: --> VOL --> BAS --> TRE --> FAD --> BAL --> VOL.
13. BAND/LOUD button
On radio mode, press this button (13) to receive the band FM1, FM2, FM3, AM1, AM2.
On any mode, in order to emphasize the bass and the treble at low volume, press and hold this button (13) for 2 seconds. Press it again to disable this function.
14. MENU button
On DVD playing mode, press MENU (13) button to display the all titles of chapters.
15. ▲/▼, ◀/▶ button
Press these (15) buttons to select you desired menus, then press ENTER (16) or press play (3) button to confirm your track.
16. ENTER button
Press the ENTER (16) button to confirm your selected menu.
17. SCAN button
Press the SCAN (17) button to play the first 10 seconds of each track, at a desired track is reached, press the scan button again to cancel SCAN feature.
18. RPT button
Press the PRT (18) button to play the selected track (file) repeatedly. Press the RPT button again to cancel RPT feature.
19. RDM button
Press the RDM (19) button to play the tracks in a random sequence. Press the RDM button again to cancel RDM feature.
20. SETUP button
On playing mode, press SETUP (20) button, menu will be showed on the TV screen. (4 mode: General set, Audio set, Preferences, Exit menu)
Press ENTER (16) button to confirm after selecting your desired content:
 - a. General set: set TV system, picture mode, angle mark and language.
 - b. Audio set: set audio output, OP mode, L + R, Dynamic, audio set and soon.
 - c. Preferences: set TV system, Video output etc.
 - d. Press SETUP (20) button again to cancel menu set.
21. PROG button
On CD, VCD mode, press this button to set the program order to play. Press Prog (21) button, and television displays programming P00:00. Set the program order to play them by using digits (5) buttons, and then press the PLAY (3) to play.

Remote Control

22. ZOOM button

On VCD, DVD playing mode, press ZOOM (22) button once for 2x zoom in, twice for 3x zoom in, third for 4x zoom in, fourth for 1/2x zoom out, fifth for 1/3x zoom out, sixth for 1/4x zoom out, seventh for normal play.

23. DSP button

Press DSP (23) button repeatedly to select from Flat, Classic, Pop or Rock.

24. OSD button

On CD, VCD, DVD mode, press the OSD (24) button, the display shows single track elapsed time, single track left time or entire disc left time, and the track being played and the amount of the whole disc.

25. ANGLE button

On DVD mode, press the ANGLE (25) button to watch the DVD content from different angle.

26. F.R button

Press F.R (26) button to advance the track (file) quickly in rewind-direction. Press once for 2x quick rewind, twice for 4x quick rewind, third for 8x quick rewind, fourth for 16x quick rewind, fifth for 32x quick rewind, sixth for normal play.

27. F.F button

Press F.F (27) button to advance the track (file) quickly in forward-direction. Press once for 2x quick advance, twice for 4x quick advance, third for 8x quick advance, fourth for 16x quick advance, fifth for 32x quick advance, sixth for normal play.

28. NTSC/PAL button

29. SLOW button

On DVD playing mode, press the SLOW (29) button once for 1/2x slow advance, twice for 1/4x slow advance, third for 1/8x slow advance, fourth for 1/16x slow advance, fifth for normal play.

Custom Radio Corp
4012 Merchant Rd.
Fort Wayne, IN
Tel : 260-489-2062
www.customradio.net
